




Make sure to have the media kit and firebacks (if used) available at the time of installation. Components from the media kit are used during installation of the burner.


Compatibility

- DVL GSR NB Insert
- DVL GS NB (AU) Inbuilt

Packing List

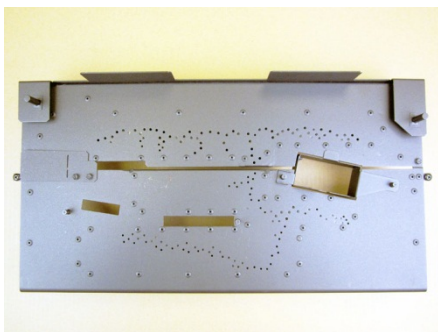


DVL Dancing Fyre Burner Assembly
with Air Deflector and Pilot Shield

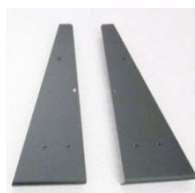

Right and Left Ember Trays



Front Log Plate
(used with logs only –
see Media Installation)

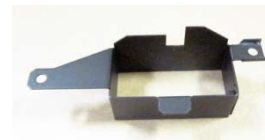

NOTE: The pilot shield ships
installed, but is not
mechanically fastened to
the burner pan.



If using LP (Propane), convert the appliance prior to installing the burner (see owner's manual).

Order of Installation

Driftwood Log Set (94500572) or
Fyre-Stones (94700764)

- Prepare the Firebox (see instructions on following page)
- Prepare the Burner (see instructions included with the media kit)
- Disable the Accent Light (see instructions on page 3)
- Install the Burner and Ember Trays(see instructions on page 4)
- Install the Firebacks (if applicable)
- Install the Media (see instructions included with the media kit)

Traditional Log Set (94500561)

- Prepare the Firebox (see instructions on following page)
- Prepare the Burner (see instructions on page 2)
- Install the Burner and Ember Trays(see instructions on page 4)
- Install the Firebacks (if applicable)
- Install the Media (see instructions included with the media kit)

Prepare the Firebox


1. Remove the glass to access the firebox cavity.
2. Remove the burner attachment screws from the firebox floor.




TRADITIONAL LOG SET ONLY

The air deflector is shipped attached to the burner (see illustration below). For NG, leave it in place. For LP, remove and discard the deflector.

NG

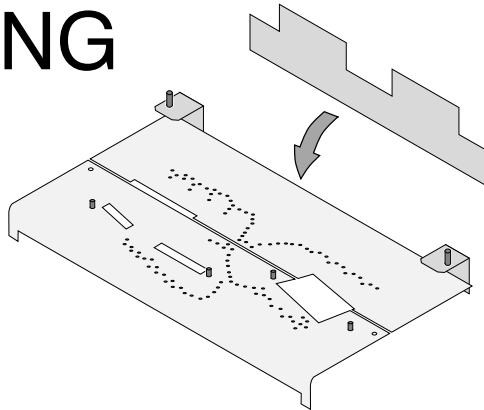


LP

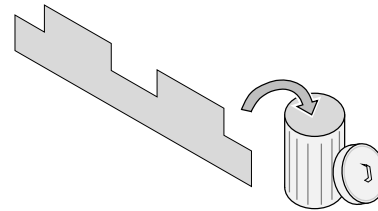

DRIFTWOOD LOG SET OR FYRE-STONES ONLY

Disable the light by removing the bulb and laying the housing flat inside the firebox cavity. Replace the screw from the light bracket into the firebox floor.

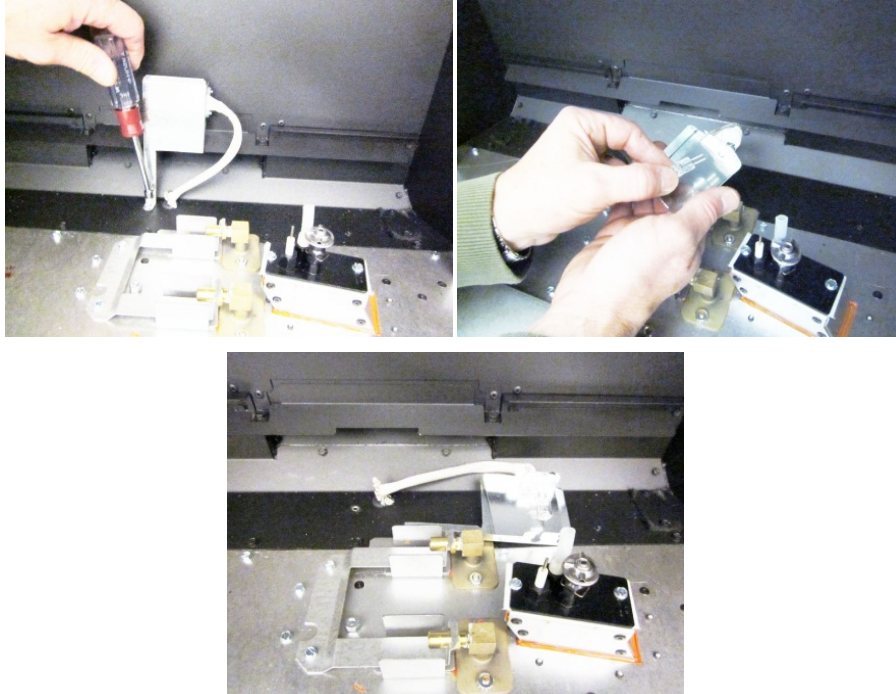

Burner Installation



NOTE: If using stones or driftwood, make sure to prepare the burner following the instructions included with the media before installing the burner.

Place the burner into position and secure using the screws removed earlier. Remove the ember tray screws from the burner. Attach the ember trays to the burner as shown below.

NOTE: Make sure the burner is fully seated over the orifices. The burner should be aligned all the way to the right.

