



# 3615 HO GSR2 Cheat Sheet

TRAVIS INDUSTRIES  
HOUSE OF FIRE

The 3615 HO GSR2 has several new features and characteristics that require special attention during installation and set-up. This unit uses the new GreenSmart 2 system. Refer to the owner's manual for full details.

## **REMOVE THE SCREEN BEFORE YOU REMOVE THE GLASS FRAME**

This fireplace uses a newly designed screen barrier. Make sure to remove the barrier prior to removing the glass frame.

1. Remove the concealment cover and place aside. It has two holes that aid in removal.



2. Remove the three screws holding the screen in place (1/4" nutdriver- magnetic driver recommended). Then pivot the screen down slightly until the clips on the bottom disengage from the glass frame.



## **This Fireplace Requires Firebacks**

96100941 Stainless Steel  
96100942 Black Enamel

96100943 Black Painted  
96100944 Ledgestone

## **If using LP (Propane)**

A conversion kit is required if using propane with this heater (sku 94400999 – GSR Stepper Motor Kit).


## **No Drill or Screw Zone**

Controls for this fireplace are directly in front. Do not drill or screw into this area (see manual for details).

## **Battery Box Heat Shield**

Travis Industries recently updated the 6015 to include a heat shield over the top of the battery box. Make sure to replace this heat shield after installing the batteries. The heat shield must be in place whenever the fireplace is in operation.

**NOTE:** The heat shield is shipped in place. It is held in place with a lock-tie. **Remove and discard this lock-tie** to allow the heat shield to be removed and the batteries installed.

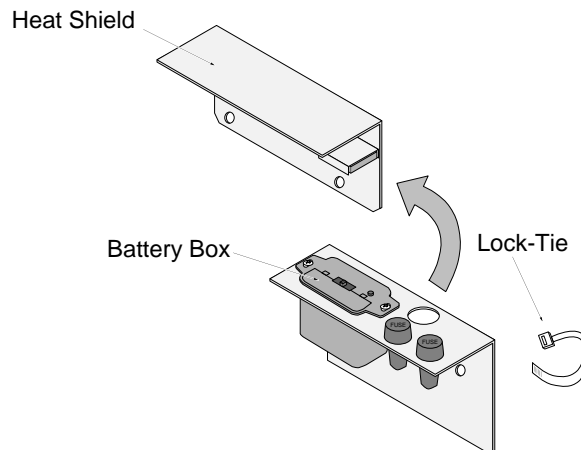



# 3615 HO GSR2 Cheat Sheet

## This Fireplace Uses a Unique Remote (no comfort control)

This fireplace uses a single-burner configuration, unlike our other fireplaces. The remote has been re-programmed to remove the comfort control feature.

## Glass Frame Tool

The glass frame tool is shipped inside the fireplace, under the concealment cover. The first time it is used you may need to loosen the screw (1/4" wrench). The tool is accessed after removing the screen. Replace the tool in this location after use.



## Glass Frame Removal

Use the glass tool to unlatch the glass frame. Remove the glass frame. The glass frame is held in place with four tabs inserted into four slots at the bottom of the firebox opening. See manual for details.



## This Fireplace Requires 5 Lbs. (2.2 Kg) of 1/4" (7mm) Crushed Glass

<b>Crushed Glass</b>	94500580 Platinum (10 lbs. 4.5 Kg)
	94500581 Bronze (10 lbs. 4.5 Kg)
	94500582 Cobalt (10 lbs. 4.5 Kg)

When installing the glass, make sure the two air channels are free of crushed glass. Use the glass frame tool (or screwdriver) to clear this area. See manual for details.



## Drywall Supports

This fireplace has two pre-attached vertical drywall supports and one horizontal drywall support (zip-tied to top). See manual for details.

## Pipe Shield and 4" (102mm) Firestops

This fireplace includes a pipe shield and two 4" (102mm) firestops used for minimum rise installations. These are shipped on top of the fireplace. See manual for details.